

Safety instructions

- Never use force.
- Follow the safety regulations on the charger packaging.
- Keep chargers away from direct sunlight and temperatures over 50 °C/120 °F.
- Store product components and chargers out of the reach of children.
- Only operate the device when it's filled.
- Only use the device for the purposes specified in this instruction manual.
- Cryogenic applications (with liquid nitrogen, for example) are not recommended.
- Only combine device heads and bottles of the same device type.
- Use only iSi original accessories and replacement parts. The use of accessories or replacement parts from other manufacturers will void the warranty and exempt the company from any liability.
- Never attach the head piece so that it is crooked.
- Never lean your body over the device when screwing on the charger.
- Never unscrew the head when the device is under pressure.
- Only use 1 iSi cream charger.
- Never heat the iSi (Mini) Easy Whip.
- Never store a filled bottle in the freezer or deep freeze compartment.
- The device is a pressurized bottle. If it is dropped or damaged, it should not be used again because it poses a risk of injury. Please have the device checked by an iSi service center.
- The iSi (Mini) Easy Whip should only be disassembled as per the "Basic Cleaning" section, page 17.
- Do not make any modifications to the iSi (Mini) Easy Whip. This will void the warranty and exempt the company from any liability.
- Please read the device instructions carefully to avoid operating errors and keep a copy on hand.

iSi Easy Whip/iSi Mini Easy Whip

By choosing the iSi (Mini) Easy Whip, you have chosen a quality household product from iSi.

Your iSi (Mini) Easy Whip can be used to prepare fluffy whipped cream in seconds and it provides perfect dispensing at the push of a button. Fresh whipped cream in the iSi (Mini) Easy Whip can be stored in the refrigerator for up to 10 days.



WARNING

The iSi (Mini) Easy Whip is not suitable for light desserts, espumas, or warm applications such as soups and sauces.



WARNING

Use only original iSi cream chargers, identified by the red iSi logo.

Product features

- High-quality aluminum bottle with coated surface
- Max. filling volume 0.25 liters/1 half pint (Mini Easy Whip) or 0.5 liters/1 pint (Easy Whip)
- Push-button for precise dispensing
- Removable decorator tip for easy and hygienic cleaning
- Head gasket with inner ring for easy removal
- User-friendly cleaning brush
- Not dishwasher safe
- Not suitable for professional use

List of materials

Description	Material
Aluminum bottle	Aluminum, coated on the interior and exterior
Head	Polybutylene terephthalate (PBT), polyoxymethylene (POM), silicon, nitrile rubber (NBR), stainless steel spring
Head gasket	Thermoplastic elastomer (TPE)
Decorator tip	Polyoxymethylene (POM), nitrile rubber (NBR)
Charger holder	Polyoxymethylene (POM)

Replacement parts

Replacement parts can be viewed via the exploded diagram, see fold-out page.

Description	Part number
Decorator tip	2215001
Head gasket	2234001
Cleaning brush	2236001
Charger holder	2299001

Operating instructions

NOTE: Before using for the first time, the device should be disassembled into its individual product components. Clean the individual components as described in “Basic Cleaning” on page 17.

PRIOR TO FILLING

1. Remove the decorator tip from the head.
2. Make sure that the head gasket is inserted into the head.

FILLING

3. Pour the whipping cream into the bottle.

NOTE: The maximum filling volume is 0.25 (1 half pint) and/or 0.5 liters (1 pint). Please note the fill line and marking on the bottom of the bottle. Do not overfill. The remaining empty space is required for optimal whipping results. Use a measuring cup.

Your iSi (Mini) Easy Whip is suitable for pure whipped cream only. We recommend the use of liquid flavouring syrups for sweetening. If you use sugar or stabilizer, completely dissolve it in a little bit of cream before filling the bottle in order to avoid the formation of clumps.

CHARGING


4. Screw the head on to the bottle so that it is straight and tighten it by hand.


**WARNING**

The head should always be screwed on properly (never crooked).

5. Insert an original iSi cream charger into the charger holder as shown in fig. 5.
6. Screw on the charger holder (with the charger inserted) to the head until you can hear that all of the charger content has released into the bottle.

English

 **WARNING** Never bend over the device when screwing on the charger.

 **WARNING** Device is now under pressure.

7. Shake device vigorously.

NOTE: The required number of shakes is important for optimal consistency of the whipped cream. If it is shaken too long or too often, the contents will be too firm and can no longer be dispensed from the bottle.

Please see the following table for shaking frequency:

Type of cream	Fat content	Shaking frequency per charger
Fresh cream	36%	3 – 4
	33%	4 – 5
UHT cream	32%	5 – 6

For lower fat content (min. 30%) or if the consistency is too light, shake more if necessary.

8. Unscrew the charger holder and dispose of the empty charger.

NOTE: A slight hiss may be heard when removing the charger holder. This is normal.

NOTE: Only 1 charger is required for filling.

9. Attach decorator tip to the head.

DISPENSING


10. When dispensing, the device must be held “head-first” (decorator tip vertical!). Gently press the button.

NOTE: Test the consistency of the contents by dispensing a small amount when the device is first used.

Important instructions for use

GENERAL


- If the device is not operated properly with the tip in the vertical position, the pressure may be lost and the device may not be able to be emptied completely.
- Be sure to use well-chilled whipping cream for optimal results.

 **WARNING** Never store a filled device in the freezer or deep freeze compartment

- Dispense whipped cream from the device shortly before eating.
- Store the device with the cleaned decorator tip in the refrigerator.

SERVICE

- Replacement parts are available individually and at an affordable price.

 **WARNING** Do not make any modifications to the iSi (Mini) Easy Whip.

- See your specialist dealer for the availability of replacement parts. In Austria, you can also go to www.isi.at.
- Only send in the complete device for repairs.

STORAGE

If the iSi (Mini) Easy Whip will not be refilled immediately, component parts should be left to air dry in a clean location (do not rub with a towel). Store the iSi (Mini) Easy Whip disassembled and only touch clean parts with clean hands.

Cleaning

⚠ WARNING Check the material compatibility of the cleaning/disinfectant solution used before cleaning (see “List of materials”, page 13).

NOTE: For cleaning, pay close attention to ensure that the correct cleaning solution or combined disinfectant and cleaning solution is used.

BASIC CLEANING

NOTE: Please follow the sequence on the back fold-out page.


1. Press the button until the device is completely empty and there is no pressure left. Remove the head from the bottle and pull off the decorator tip.
2. Remove the head gasket for basic cleaning.
3. Rinse out the dispensing valve on both sides using warm tap water (max. 50 °C/120 °F). Also press and hold the button several times until you hear a click.
4. Clean all product components by hand using warm (not hot) tap water along with a standard cleaning agent. Clean the decorator tip using the cleaning brush. Completely remove any fat and egg white residue.

NOTE: Do not use scouring agents or abrasive sponges/brushes.


NOTE: Do not clean in the dishwasher and do not use boiling water.

INTERIM CLEANING

The decorator tip can be removed at any time for cleaning – simply rinse it with warm water.

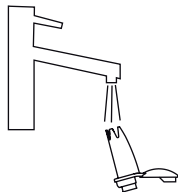

Troubleshooting

 **WARNING** Never use force to open an iSi (Mini) Easy Whip that is under pressure.

RELEASE THE PRESSURE: Place the device upright, place a towel or cloth over the tip and gently press the button until the pressure is released from the iSi (Mini) Easy Whip. Now the head can be removed from the bottle.

If the valve is clogged, press the button firmly so that a click is heard, which allows the gas to escape. Press the button in this manner only if there is a blockage or to thoroughly clean the device (page 17).

If the pressure won't release, send the device to iSi or a service center.

► The cream won't dispense

The valve is clogged with undissolved sugar

- **“Release the pressure” (page 18) and then carry out “Basic Cleaning” (page 17).**
- **Make sure that the sugar is dissolved completely. To sweeten, we recommend using liquid flavouring syrup.**

Cream is too firm due to excessive chilling

- **Avoid freezing the cream.**

The cream is too stiff

- **Next time reduce the intensity and number of shakes after charging.**
- **See the shaking frequency table under “Charging” (page 14).**

No pressure/not enough pressure in the device

- **Only use original iSi cream chargers.**
- **Do not reuse empty chargers – dispose of them immediately.**
- **Only operate the device “headfirst” (decorator tip vertical) otherwise this could lead to a loss of pressure.**

English

Too many chargers were used

- **“Release the pressure” (page 18). Set up the device again for use.**
- **You only need 1 iSi cream charger for your iSi (Mini) Easy Whip.**

► **The dispensed cream too runny**

The device was overfilled

- **“Release the pressure” (page 18). Pour out the excess cream. Set up the device again for use.**
- **See “Filling” (page 14), for max. filling volume.**

The device was not shaken or it was not shaken enough

- **See the shaking frequency table under “Charging” (page 14).**

Cream is not cold enough

- **Place your filled iSi (Mini) Easy Whip in the refrigerator for at least 1 – 2 hours prior to serving.**

The fat content of the cream is too low

- **The cream must have a fat content of at least 30%.**

An unsuitable charger was used

- **Only use original iSi cream chargers.**

► **Cream is leaking from the decorator tip**

The valve is clogged with undissolved sugar

- **“Release the pressure” (page 18) and then carry out “Basic Cleaning” (page 17).**
- **Make sure that the sugar is dissolved completely. To sweeten, we recommend using liquid flavouring syrup.**

The dispensing valve has been damaged

- **Send the device to iSi or a service center.**

► **It is difficult to screw on the charger holder**

The charger being used is not suitable

- **Only use original iSi cream chargers.**

► **Cream charger will not puncture**

The charger being used is not suitable

- **Only use original iSi cream chargers.**

The charger was inserted backwards

- **Properly insert the charger (see sequence on the fold-out page, step 5).**

The piercing unit has been damaged

- **Send the device to iSi or a service center.**

► **During use, gas is leaking between the bottle and the head**

Head gasket is missing

- **“Release the pressure” (page 18). Insert head gasket into the head.**

Head gasket has been damaged

- **“Release the pressure” (page 18). Replace head gasket.**

Head was not tightened securely

- **Screw the head on to the bottle so that it is straight and tighten it by hand as per the instructions.**

The threading of the bottle head has been damaged

- **“Release the pressure” (page 18). Send the device to iSi or a service center.**